

Micro-spectrometer



C12880MA

Finger-tip sized, ultra-compact spectrometer head supporting high sensitivity and long wavelength region

The C12880MA is a high-sensitivity, ultra-compact (finger-tip sized) spectrometer head that supports the long wavelength region (up to 850 nm). Hermetically sealed packaging provides improved humidity resistance. This product is suitable for integration into a variety of compact devices.

Features

- **Finger-tip size: 20.1 × 12.5 × 10.1 mm**
- **Weight: 5 g**
- **Spectral response range: 340 to 850 nm**
- **High sensitivity**
- **Spectral resolution: 15 nm max.**
- **Trigger-compatible**
- **Hermetic package: high reliability against humidity**
- **For integration into mobile measurement equipment**
- **Wavelength conversion factors^{*1} are listed on final inspection sheet.**

*1: Conversion factors for converting the image sensor pixel number into a wavelength. A calculation factor for converting the A/D converted count into the input light level is not provided.

Applications

- **Food inspection**
- **Biometry (POC)**
- **Tester for lights, LEDs, etc.**
- **Water quality control monitors and other environment measuring instruments**
- **Various light level measurements**

Structure

| Parameter | Specification | Unit |
|------------------------|---|--------|
| Image sensor | High-sensitivity CMOS linear image sensor with slit | - |
| Number of pixels | 288 | pixels |
| Pixel size (H × V) | 14 × 200 | μm |
| Slit*2 (H × V) | 50 × 500 | μm |
| NA*3 | 0.22 | - |
| Dimensions (W × D × H) | 20.1 × 12.5 × 10.1 | mm |
| Weight | 5 | g |

*2: Entrance slit aperture size

*3: Numeric aperture (solid angle)

Absolute maximum ratings (Ta=25 °C unless otherwise noted)

| Parameter | Symbol | Condition | Value | Unit |
|-----------------------|--------|-----------------------|------------|------|
| Supply voltage | Vs max | | -0.3 to +6 | V |
| Clock pulse voltage | V(CLK) | | -0.3 to +6 | V |
| Start pulse voltage | V(ST) | | -0.3 to +6 | V |
| Operating temperature | Topr | No dew condensation*4 | +5 to +50 | °C |
| Storage temperature | Tstg | No dew condensation*4 | -20 to +70 | °C |

*4: When there is a temperature difference between a product and the surrounding area in high humidity environment, dew condensation may occur on the product surface. Dew condensation on the product may cause deterioration in characteristics and reliability.

Note: Exceeding the absolute maximum ratings even momentarily may cause a drop in product quality. Always be sure to use the product within the absolute maximum ratings.

▣ Recommended terminal voltage (Ta=25 °C)

| Parameter | Symbol | Min. | Typ. | Max | Unit |
|---------------------|------------|-----------|------|-----------|------|
| Supply voltage | Vs | 4.75 | 5 | 5.25 | V |
| Clock pulse voltage | High level | Vs - 0.25 | Vs | Vs + 0.25 | V |
| | Low level | 0 | - | 0.3 | |
| Start pulse voltage | High level | Vs - 0.25 | Vs | Vs + 0.25 | V |
| | Low level | 0 | - | 0.3 | |

▣ Electrical characteristics [Ta=25 °C, Vs=5 V, V(CLK)=V(ST)=5 V]

| Parameter | Symbol | Min. | Typ. | Max | Unit |
|-----------------------|--------|------|--------|-----|------|
| Clock pulse frequency | f(CLK) | 0.2 | - | 5 | MHz |
| Video rate | VR | - | f(CLK) | - | Hz |
| Output impedance*5 | Zo | - | 150 | - | Ω |
| Current consumption*6 | I | - | 20 | - | mA |

*5: Video signal output terminal (10-pin)

An increase in the current consumption at the video output terminal also increases the chip temperature and so causes the dark current to rise. To avoid this, connect a buffer amplifier to the video output terminal so that the current flow is minimized.

*6: f(CLK)=5 MHz

▣ Electrical and optical characteristics [Ta=25 °C, Vs=5 V, V(CLK)=V(ST)=5 V]

| Parameter | Symbol | Min. | Typ. | Max | Unit |
|-----------------------------------|--------|------|------------|------|-------------------|
| Conversion efficiency | CE | - | 50 | - | μV/e ⁻ |
| Dark output voltage*7 | Vd | - | 0.8 | - | mV |
| Saturation output voltage*8 | Vsat | - | 4.3 | - | V |
| Readout noise | Nr | - | 1.8 | - | mV rms |
| Output offset voltage | Vo | 0.3 | 0.5 | 0.9 | V |
| Spectral response range | λ | - | 340 to 850 | - | nm |
| Spectral resolution (FWHM) | - | - | 12 | 15 | nm |
| Wavelength reproducibility*9 | λr | -0.5 | - | +0.5 | nm |
| Wavelength temperature dependence | λTd | -0.1 | - | +0.1 | nm/°C |
| Spectral stray light*10 | SL | - | - | -25 | dB |

*7: Integration time=10 ms

*8: Relative value in reference to output offset voltage Vo

Example: When output offset voltage Vo is 0.5 V and saturation output voltage Vsat is 4.3 V, the saturation voltage at the video signal output terminal is 4.8 V.


*9: Measured under constant light input conditions

*10: The ratio of the count measured when a light spectrum (655 nm) is input to the count measured at that wavelength ± 40 nm.

Optical component layout

Besides a CMOS image sensor chip integrated with an optical slit by etching technology, the C12880MA employs a reflective concave blazed grating formed by nanoimprint. In addition, the glass used in the light path of the previous C10988MA-01 is not used in the C12880MA, making it extremely compact.


Structure

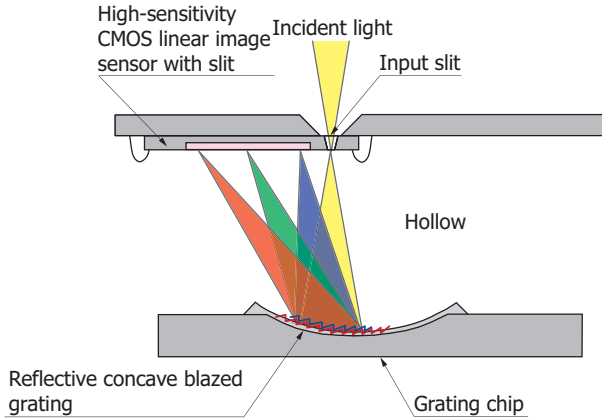


KACCC0757EB



High-sensitivity CMOS linear image sensor with a slit [Incident light side (back of chip)]

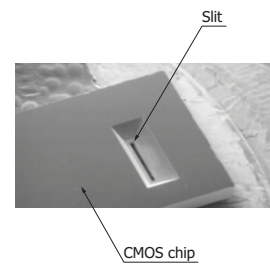


Spectral response (typical example)

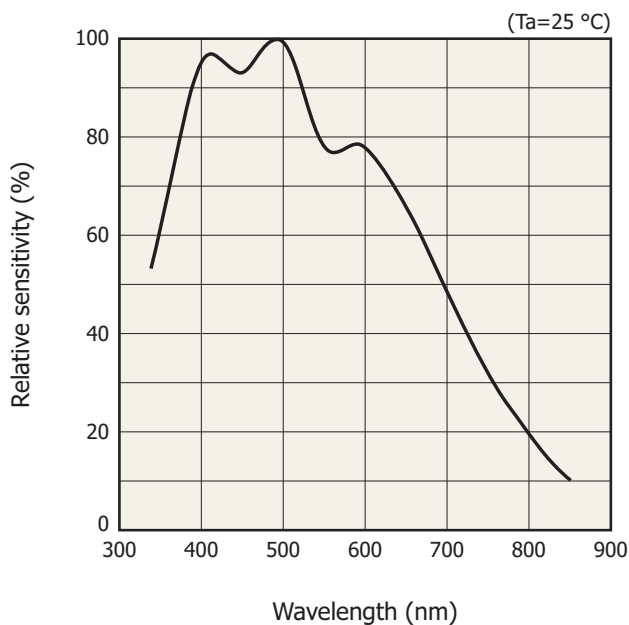


KACCB0381EA

Spectral resolution vs. wavelength (typical example)

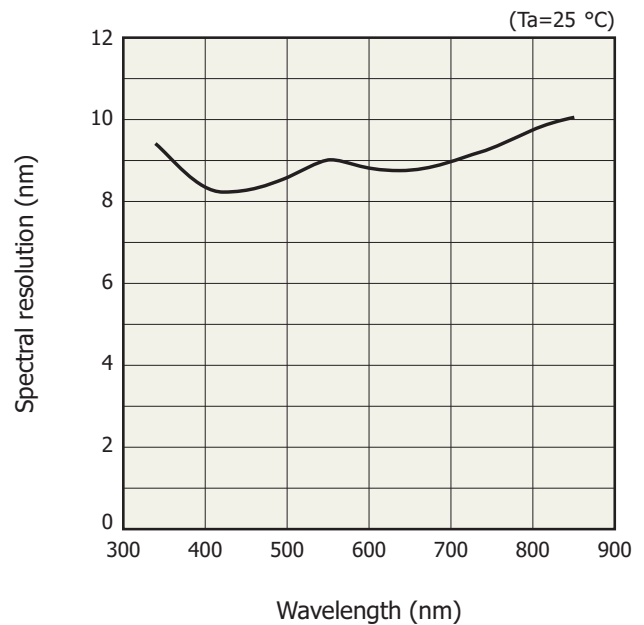


KACCB0382EA

Linearity (typical example)

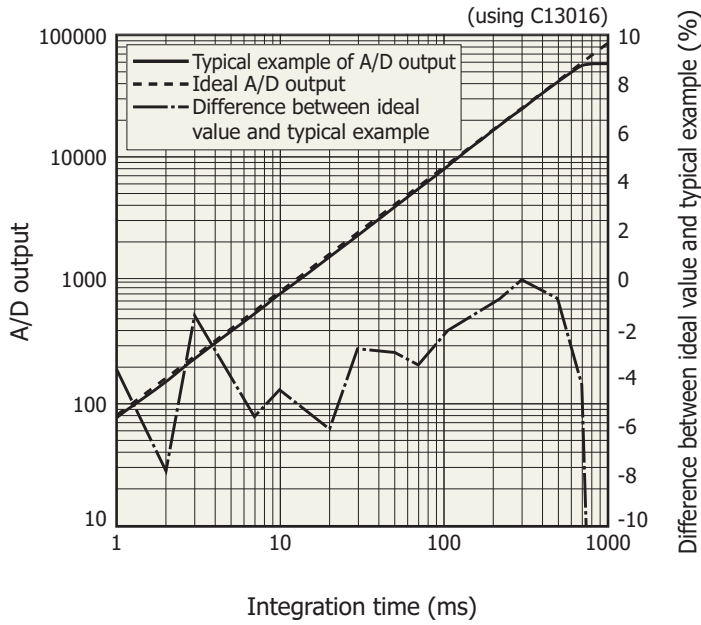


A/D output is the output with dark output is subtracted when light is input. The difference between the ideal value and typical example contains a measurement error. The smaller the A/D output, the larger the measurement error.

Dark output vs. ambient temperature (typical example)

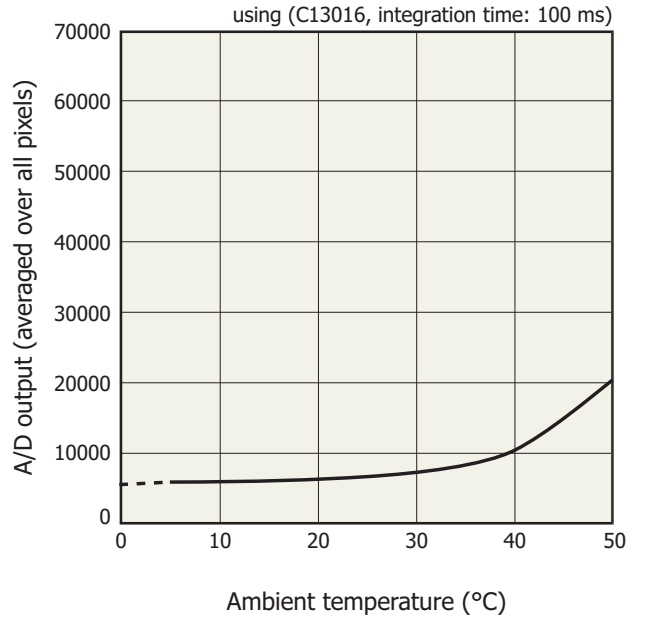


A/D output is the sum of the sensor and circuit offset outputs and the sensor dark output.

Measurable incident light level

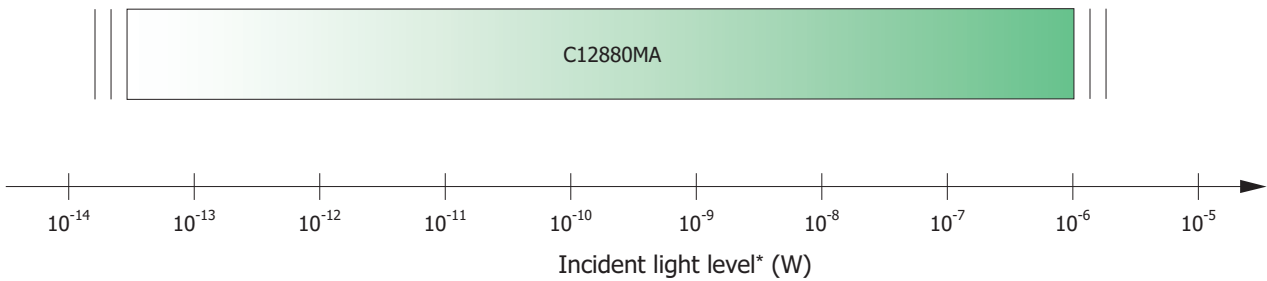

* Using C13016, input spot diameter 800 μm (λ=600 nm)


Recommended driver circuit example

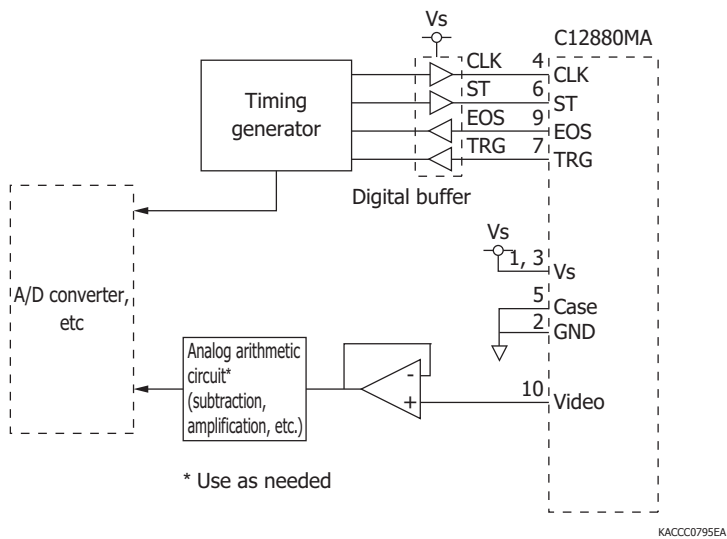

Precautions

- The packaging of the C12880MA is electrically conductive, so be careful when designing the circuit to avoid short circuit caused by contact with a circuit pattern.
- If external force is repeatedly applied to the lead pins, this may damage the lead pins.
- To prevent damage due to soldering, be careful of the soldering temperature and time.
As a general guide, finish soldering within 3.5 seconds at 350 °C or less when soldering by hand, or within 10 seconds at 260 °C or less when using a solder bath.

Dimensional outline (unit: mm, tolerance unless otherwise noted: ±0.2)

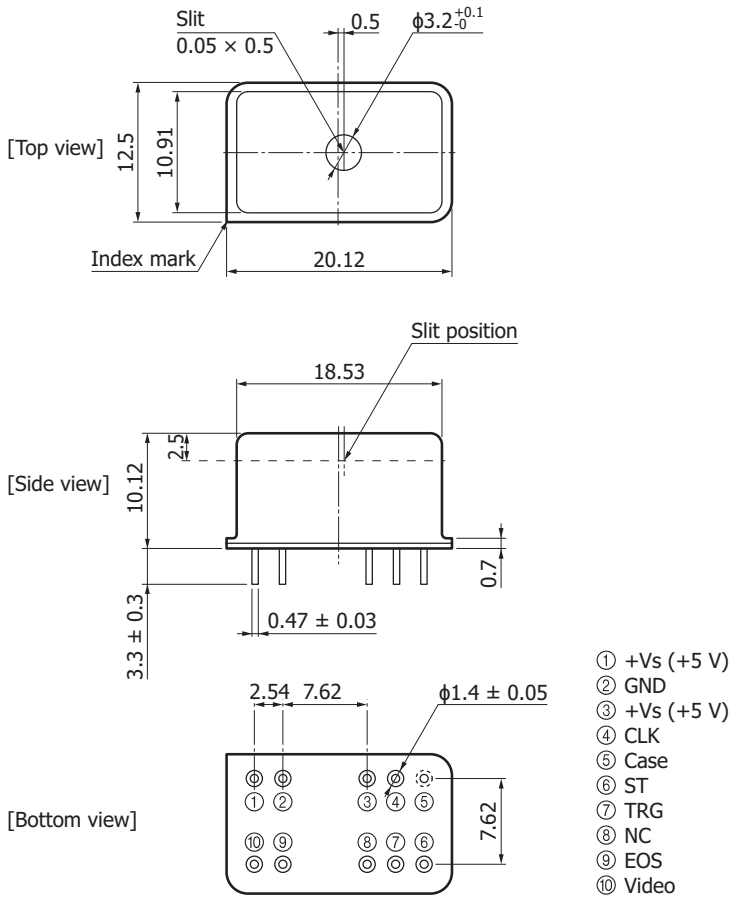

KACCA0356EA


Pin connections

Make electrical connections to an external circuit using leads.

| Pin no. | Symbol | Name | I/O | Description |
|---------|--------|----------------|-----|--|
| 1 | +Vs | Supply voltage | I | Sensor power supply: 5 V |
| 2 | GND | Ground | - | Sensor ground |
| 3 | +Vs | Supply voltage | I | Sensor power supply: 5 V |
| 4 | CLK | Clock pulse | I | Sensor clock pulse |
| 5 | Case | Case | - | Case connection |
| 6 | ST | Start pulse | I | Sensor start pulse |
| 7 | TRG | Trigger pulse | O | Pulse for capturing sensor video signals |
| 8 | NC | | - | No connection |
| 9 | EOS | End of scan | O | Sensor scan end |
| 10 | Video | Video output | O | Sensor video output |

Note: Pin no. 5 and the case of the micro-spectrometer are at the same potential. Ensure that the case is not in contact with other potentials during use. Parts coming in contact with the case must be set at the same potential as pin no. 5 or insulated from other potentials.

Timing chart

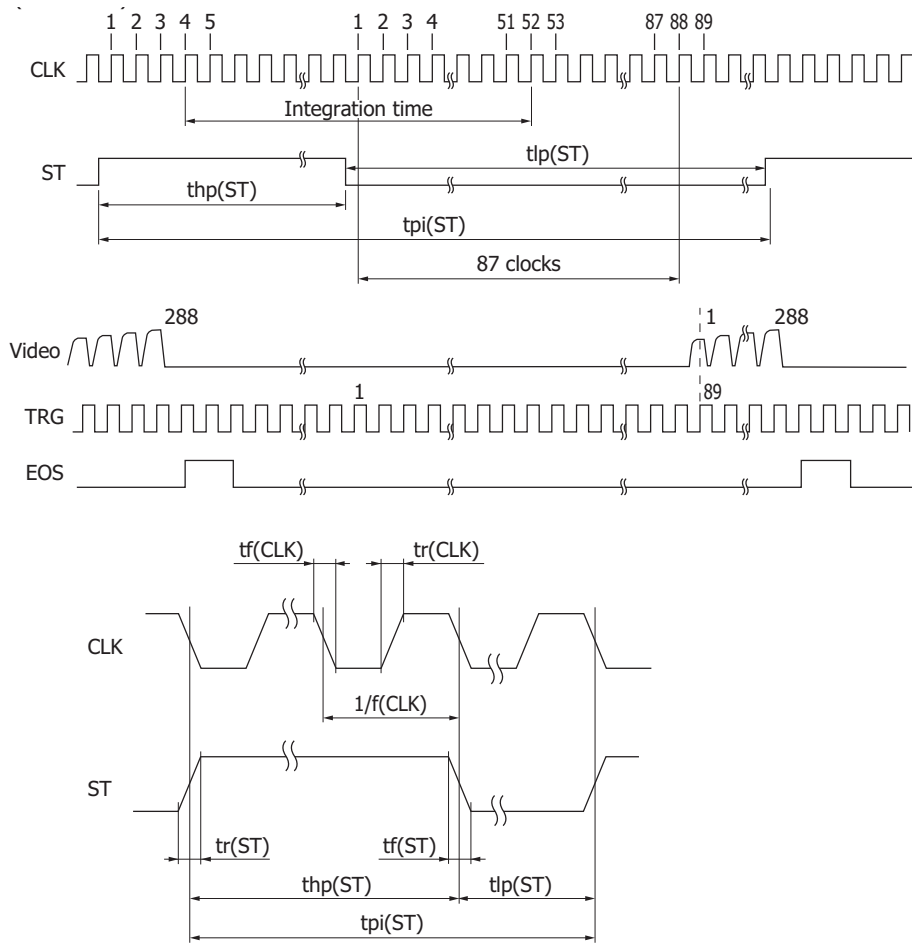

KACCC0771EA

| Parameter | Symbol | Min. | Typ. | Max. | Unit |
|---------------------------------|---------------------------------------|---------------------|------|------|------|
| Start pulse cycle*11 | $t_{pi}(\text{ST})$ | $381/f(\text{CLK})$ | - | - | s |
| Start pulse high period*12 | $t_{hp}(\text{ST})$ | $6/f$ | - | - | s |
| Start pulse low period | $t_{lp}(\text{ST})$ | $375/f$ | - | - | s |
| Start pulse rise and fall times | $t_r(\text{ST})$, $t_f(\text{ST})$ | 0 | 10 | 30 | ns |
| Clock pulse duty | - | 45 | 50 | 55 | % |
| Clock pulse rise and fall times | $t_r(\text{CLK})$, $t_f(\text{CLK})$ | 0 | 10 | 30 | ns |

*11: The shortest period required to output the video signals from all pixels.

*12: The integration time equals the high period of ST plus 48 CLK cycles.

The shift register starts operation at the rising edge of CLK immediately after ST goes low.


The integration time can be changed by changing the ratio of the high and low periods of ST.

If the first TRG pulse after ST goes low is counted as the first pulse, the Video signal should be acquired at the rising edge of the 89th TRG pulse.

Operation example

This is an operating example when the clock pulse frequency is set to maximum (video data rate is also set to maximum), the time per scan to minimum, and the integration time to maximum.

- Clock pulse frequency [f(CLK)] = Video data rate
= 5 MHz
- Start pulse cycle [tpi(ST)] = $381/f(\text{CLK})$
= $381/5 \text{ MHz}$
= 76.2 μs
- Low period of start pulse min. [tlp(ST)] = $375/f(\text{CLK})$
= $375/5 \text{ MHz}$
= 75 μs
- High period of start pulse [thp(ST)] = Start pulse cycle [tpi(ST)] - Low period of start pulse min. [tlp(ST)]
= 76.2 μs - 75 μs
= 1.2 μs

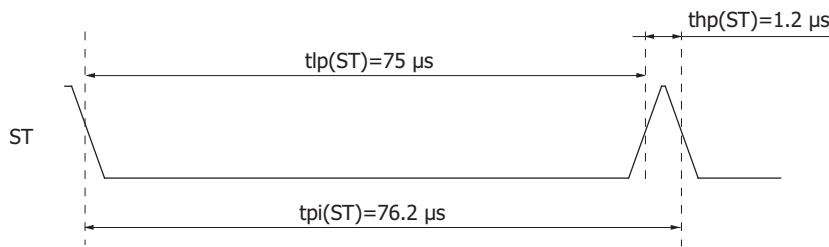


KACCC0772EA

Integration time is equal to the high period of start pulse + 48 cycles of clock pulses, so it will be 1.2 μs + 9.6 μs = 10.8 μs.

Selection chart


A micro-spectrometer with SMA connector (for optical fiber connection), an evaluation circuit, and a driver circuit are available as related products for the micro-spectrometer.

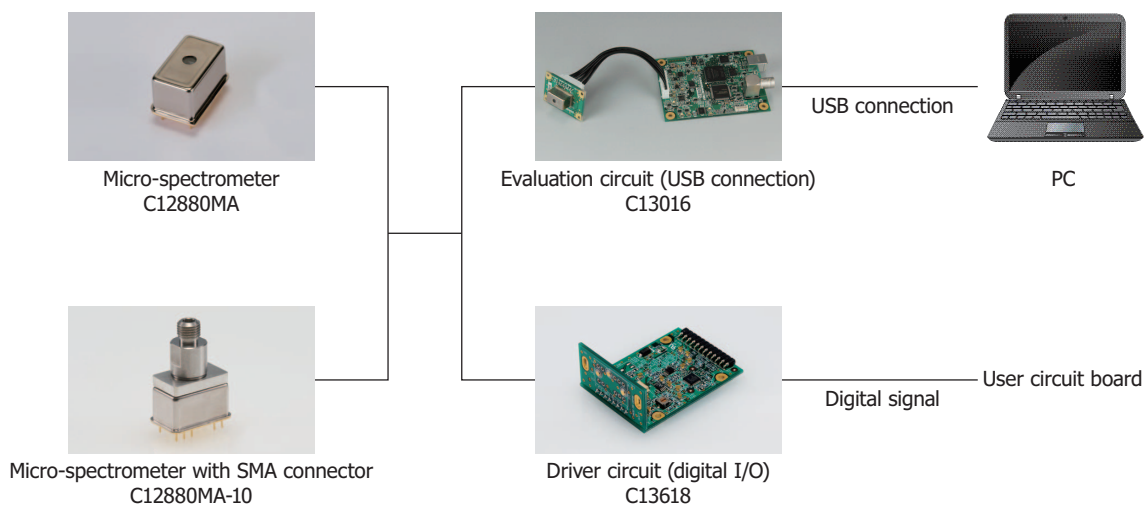



KACCC0836EA

Micro-spectrometer with SMA connector C12880MA-10

The C12880MA-10 is a product in which an SMA connector is attached to the C12880MA. It has an optical system inside the connector that can be connected with an optical fiber (single core, NA=0.22) with an SMA connector. The specifications of the C12880MA-10 is the same as those of the C12880MA except the connector section.

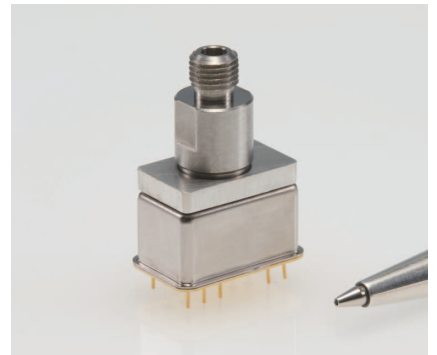

Dimensional outline (unit: mm)

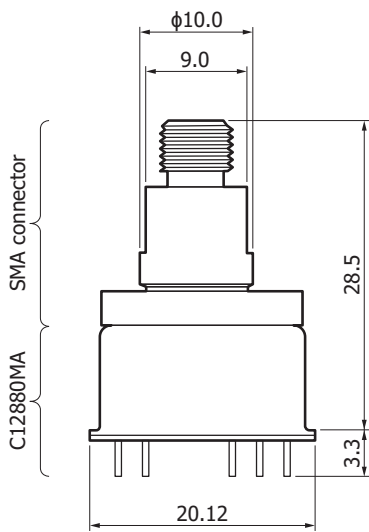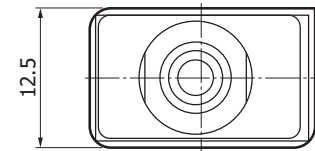

Tolerance unless otherwise noted: ±0.5


KACCA0381EA

Options

| Product name | Type no. | Core diameter (μm) | Specification |
|---|----------|--------------------|---|
| Fiber for UV/visible range (resistance to UV) | A9762-01 | 600 | NA=0.22, length=1.5 m With SMA905D connector on each end |
| | A9762-05 | 400 | |

Driver circuit for micro-spectrometer C13618

The C13618 is a driver circuit that the C12880MA or C12880MA-10 can be mounted on. It has an A/D converter that can be used to obtain digital data (16-bit) by applying an external power supply and drive signal. Using this driver circuit with the user's circuit board having LVDS level and 3.3 V level I/O ports eliminates the need for designing analog circuits and video output conversion circuits.

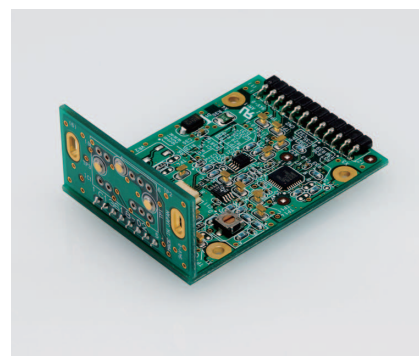

Structure

| Parameter | Specification | Unit |
|--|---|------|
| Applicable micro-spectrometers (sold separately) | C12880MA, C12880MA-10 | - |
| A/D converter | AD7961 by Analog Devices | - |
| I/O terminal | Connector 801-87-012-20-002101 by PRECI-DIP | - |
| Number of I/O terminals | 12 | - |
| Dimensions | 50 × 40 × 21.6 | mm |
| Weight | 14.3 | g |

Absolute maximum ratings

| Parameter | Symbol | Condition | Value | Unit |
|-----------------------|--------|------------------------|------------|------|
| Operating temperature | Topr | No dew condensation*13 | +5 to +40 | °C |
| Storage temperature | Tstg | No dew condensation*13 | -20 to +70 | °C |

*13: When there is a temperature difference between a product and the surrounding area in high humidity environment, dew condensation may occur on the product surface. Dew condensation on the product may cause deterioration in characteristics and reliability.

Note: Exceeding the absolute maximum ratings even momentarily may cause a drop in product quality. Always be sure to use the product within the absolute maximum ratings.

Electrical characteristics (Ta=25 °C, Vs=SENSOR_ST=SENSOR_CLK=3.3 V)


| Parameter | Symbol | Min. | Typ. | Max. | Unit |
|-------------------------------|------------|------|------|------|------|
| Sensor clock frequency | SENSOR_CLK | 0.2 | - | 5 | MHz |
| A/D converter clock frequency | AD_CLK | - | 250 | 300 | MHz |
| Current consumption | Ic | - | 150 | 200 | mA |

Recommended operating conditions (Ta=25 °C)

| Parameter | Symbol | Min. | Typ. | Max. | Unit | |
|--------------------------------|----------------------------|------------------|------|------|-------|---|
| Power supply | Vs | 3.15 | 3.3 | 3.45 | V | |
| Sensor clock input signal | High level | SENSOR_CLK | 3.15 | 3.3 | 3.45 | V |
| | Low level | | 0 | - | | |
| Sensor start input signal | High level | SENSOR_ST | 3.15 | 3.3 | 3.45 | V |
| | Low level | | 0 | - | | |
| A/D converter output signal*14 | Input voltage range | AD_CLK+, AD_CLK- | 0.8 | - | 1.575 | V |
| | Differential input voltage | | 0.1 | - | | |

*14: AD_CLK+ and AD_CLK- are a pair of LVDS signals.

Dimensional outline (unit: mm)

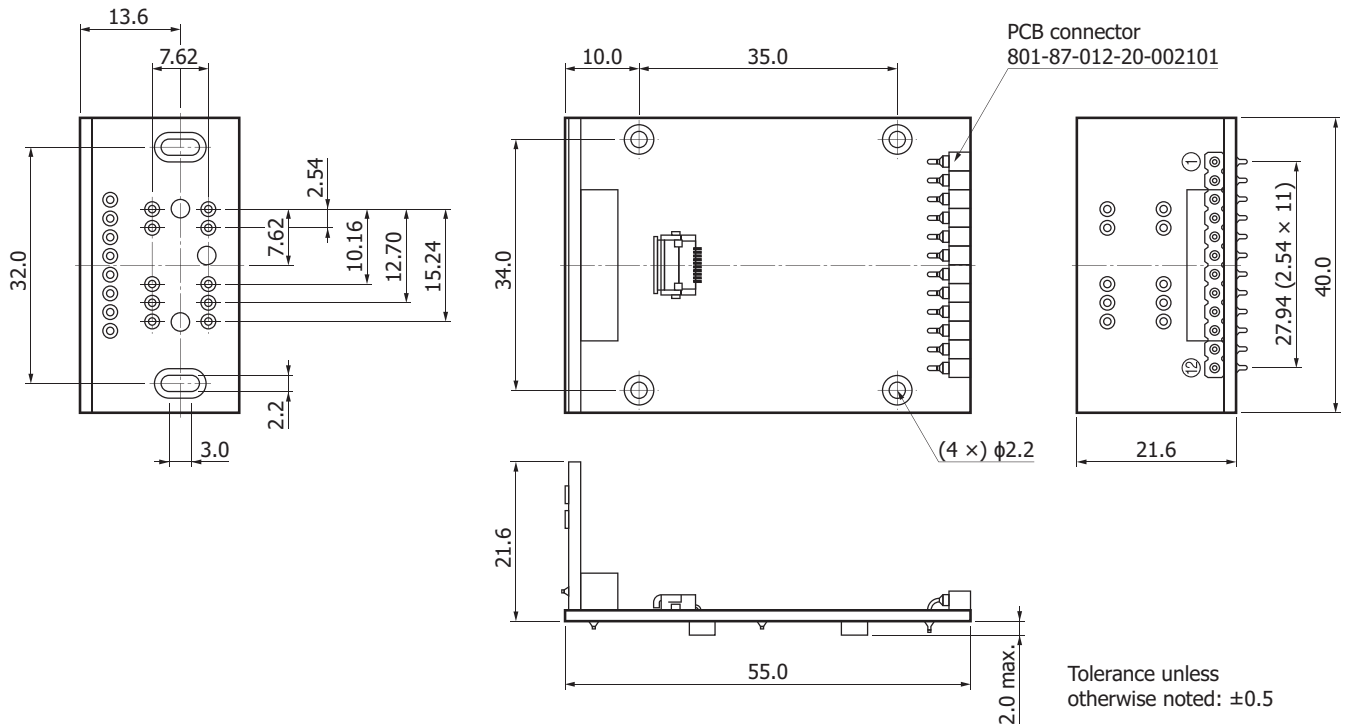


KACCA0387EA

Pin connections

| Pin no. | Symbol | Input/Output | Function |
|---------|------------|--------------|--|
| 1 | Vs | Input | Supply voltage |
| 2 | NC | - | - |
| 3 | SENSOR_CLK | Input | Clock pulse for C12880MA and C12880MA-10 |
| 4 | SENSOR_ST | Input | Start pulse for C12880MA and C12880MA-10 |
| 5 | SENSOR_TRG | Output | Trigger pulse for C12880MA and C12880MA-10 |
| 6 | AD_CLK+ | Input | Clock pulse for A/D converter |
| 7 | AD_CLK- | | |
| 8 | AD_DCO+ | Output | Buffered clock pulse of A/D converter |
| 9 | AD_DCO- | | |
| 10 | AD_D+ | Output | Data of A/D converter |
| 11 | AD_D- | | |
| 12 | GND | - | Ground |

Micro-spectrometer evaluation circuit C13016 (sold separately)

The C13016 is a circuit board designed to simply evaluate the characteristics of the micro-spectrometer C12880MA. The characteristics of the C12880MA can be evaluated using the evaluation software by connecting the C12880MA to a PC with a USB cable A9160 (AB type, sold separately)*15.

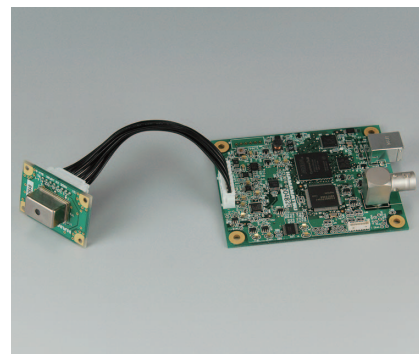

Features

- Initial evaluation circuit for micro-spectrometer C12880MA
- Wavelength conversion factors of the micro-spectrometer can be input from a PC.*16
- High A/D resolution (16-bit)
- USB powered

*15: Compatible OS:

Microsoft® Windows® 7 Professional SP1 (32-bit, 64-bit), Microsoft Windows 8 Professional (32-bit, 64-bit)

*16: Typical wavelength conversion factors are entered at the time of shipment of the C13016. To measure a spectrum with higher wavelength accuracy, it is necessary to input the wavelength conversion factors listed in the final inspection sheet that comes with each micro-spectrometer.

Note: Microsoft and Windows are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Electrical characteristics

| Parameter | Specification | Unit |
|-----------------------|---------------|------|
| Interface | USB 2.0 | - |
| A/D conversion | 16 | bit |
| Clock pulse frequency | 5 | MHz |
| Video rate | 5 | MHz |
| Integration time | 11 to 1000000 | μs |

Structure

| Parameter | Specification | Unit |
|-------------------------|---------------|---------|
| Applicable spectrometer | C12880MA | - |
| Dimensions | Control board | 90 × 70 |
| | Sensor board | 30 × 44 |


Absolute maximum ratings

| Parameter | Condition | Value | Unit |
|-----------------------|------------------------|------------|------|
| Operating temperature | No dew condensation*17 | +5 to +40 | °C |
| Storage temperature | No dew condensation*17 | -20 to +70 | °C |

*17: When there is a temperature difference between a product and the surrounding area in high humidity environment, dew condensation may occur on the product surface. Dew condensation on the product may cause deterioration in characteristics and reliability.


Note: Exceeding the absolute maximum ratings even momentarily may cause a drop in product quality. Always be sure to use the product within the absolute maximum ratings.

Connection example

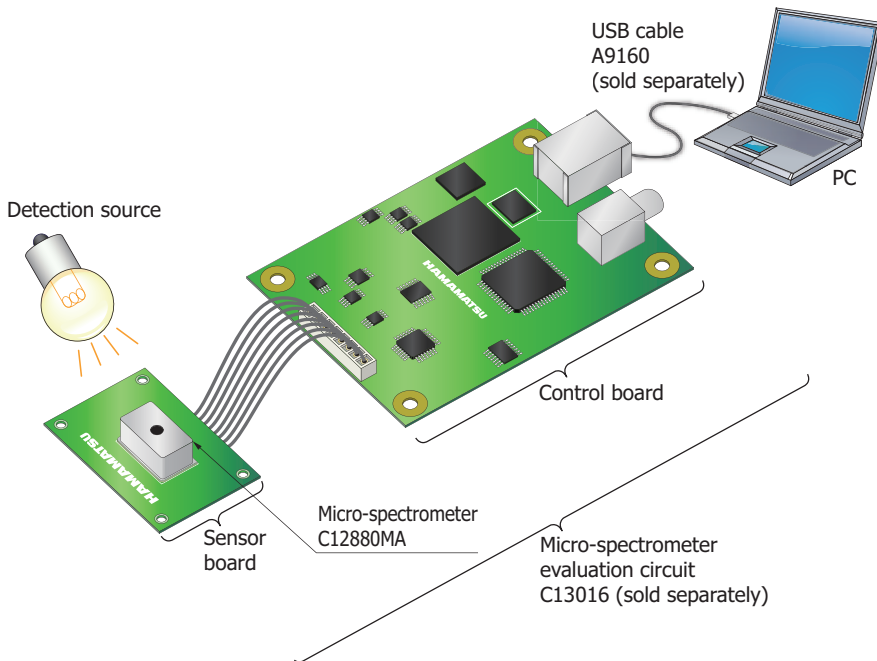

KACCC0800EA

Evaluation software display example

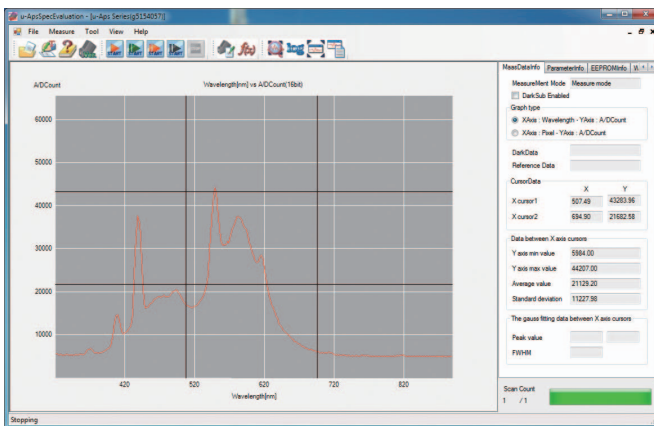

Mini-spectrometer/micro-spectrometer lineup

| Type no. | Type | Spectral response range (nm) | | | | | | | | | | | | | Spectral resolution max. (nm) | Image sensor | | | |
|-----------|--|------------------------------|------------|-----|-----|------|------|------|------|------|------|------|------|------|-------------------------------|--------------|--|-------------------------|---|
| | | 200 | 400 | 600 | 800 | 1000 | 1200 | 1400 | 1600 | 1800 | 2000 | 2200 | 2400 | 2600 | | | | | |
| C10082CA | TM-UV/VIS-CCD High sensitivity | | | | | | | | | | | | | | | | | 6 | Back-thinned CCD image sensor |
| C10082CAH | TM-UV/VIS-CCD High resolution | | 200 to 800 | | | | | | | | | | | | | | | 1* | |
| C10082MD | TM-UV/VIS-MOS Wide dynamic range | | | | | | | | | | | | | | | | | 6 | CMOS linear image sensor |
| C10083CA | TM-VIS/NIR-CCD High sensitivity | | | | | | | | | | | | | | | | | 8 (λ=320 to 900 nm) | Back-thinned CCD image sensor |
| C10083CAH | TM-VIS/NIR-CCD High resolution | | | | | | | | | | | | | | | | | 1* (λ=320 to 900 nm) | |
| C10083MD | TM-VIS/NIR-MOS Wide dynamic range | | | | | | | | | | | | | | | | | 8 | CMOS linear image sensor |
| C11697MB | TM-VIS/NIR-MOS-II Trigger-compatible | | | | | | | | | | | | | | | | | 8 | High-sensitivity CMOS linear image sensor |
| C9404CA | TG-UV-CCD High sensitivity | | 200 to 400 | | | | | | | | | | | | | | | 3 | Back-thinned CCD image sensor |
| C9404CAH | TG-UV-CCD High resolution | | 200 to 400 | | | | | | | | | | | | | | | 1* | |
| C9405CB | TG-SWNIR-CCD-II IR-enhanced | | | | | | | | | | | | | | | | | 5 (λ=550 to 900 nm) | IR-enhanced back-thinned CCD image sensor |
| C11713CA | TG-RAMAN-I High resolution | | | | | | | | | | | | | | | | | 0.3* | Back-thinned CCD image sensor |
| C11714CB | TG-RAMAN-II High resolution | | | | | | | | | | | | | | | | | 0.3* | IR-enhanced back-thinned CCD image sensor |
| C11482GA | TG2-NIR Non-cooled type | | | | | | | | | | | | | | | | | 7 | InGaAs linear image sensor |
| C9913GC | TG-cooled NIR-I Low noise (cooled type) | | | | | | | | | | | | | | | | | 7 | |
| C9914GB | TG-cooled NIR-II Low noise (cooled type) | | | | | | | | | | | | | | | | | 8 | |
| C11118GA | TG-cooled NIR-III Low noise (cooled type) | | | | | | | | | | | | | | | | | 20 | |
| C13053MA | TF-SWIR-MOS-II Compact, thin case | | | | | | | | | | | | | | | | | 3.5 | High-sensitivity CMOS linear image sensor |
| C13054MA | TF-RAMAN Compact, thin case | | | | | | | | | | | | | | | | | 0.4* | |
| C13555MA | TF-VIS-MOS-II Compact, thin case | | | | | | | | | | | | | | | | | 3 | |
| C11007MA | RC-VIS-MOS Spectrometer module | | | | | | | | | | | | | | | | | 9 | |
| C11008MA | RC-SWNIR-MOS Spectrometer module | | | | | | | | | | | | | | | | | 8 | IR-enhanced CMOS linear image sensor |

* Typ.

For installation into mobile measuring equipment

| Type no. | Type | Spectral response range (nm) | | | | | | | | | | | | | Spectral resolution max. (nm) | Image sensor | | | |
|----------|-----------------------------------|------------------------------|-----|-----|-----|------|------|------|------|------|------|------|------|------|-------------------------------|--------------|--|---|--------------------------------------|
| | | 200 | 400 | 600 | 800 | 1000 | 1200 | 1400 | 1600 | 1800 | 2000 | 2200 | 2400 | 2600 | | | | | |
| C11009MA | RC-VIS-MOS Spectrometer head | | | | | | | | | | | | | | | | | 9 | CMOS linear image sensor |
| C11010MA | RC-SWNIR-MOS Spectrometer head | | | | | | | | | | | | | | | | | 8 | IR-enhanced CMOS linear image sensor |

For installation into mobile measuring equipment (ultra-compact)

| Type no. | Type | Spectral response range (nm) | | | | | | | | | | | | | Spectral resolution max. (nm) | Image sensor | | | |
|----------|-----------------------------------|------------------------------|-----|-----|-----|------|------|------|------|------|------|------|------|------|-------------------------------|--------------|--|----|---|
| | | 200 | 400 | 600 | 800 | 1000 | 1200 | 1400 | 1600 | 1800 | 2000 | 2200 | 2400 | 2600 | | | | | |
| C11708MA | MS-SWNIR-MOS Spectrometer head | | | | | | | | | | | | | | | | | 20 | CMOS linear image sensor |
| C12666MA | Spectrometer head | | | | | | | | | | | | | | | | | 15 | CMOS linear image sensor |
| C12880MA | Spectrometer head | | | | | | | | | | | | | | | | | 15 | High-sensitivity CMOS linear image sensor |

Related information

www.hamamatsu.com/sp/ssd/doc_en.html

■ Precautions

- Disclaimer

■ Technical information

- Mini-spectrometers

Information described in this material is current as of June, 2016.

Product specifications are subject to change without prior notice due to improvements or other reasons. This document has been carefully prepared and the information contained is believed to be accurate. In rare cases, however, there may be inaccuracies such as text errors. Before using these products, always contact us for the delivery specification sheet to check the latest specifications.

The product warranty is valid for one year after delivery and is limited to product repair or replacement for defects discovered and reported to us within that one year period. However, even if within the warranty period we accept absolutely no liability for any loss caused by natural disasters or improper product use. Copying or reprinting the contents described in this material in whole or in part is prohibited without our prior permission.

HAMAMATSU

www.hamamatsu.com

HAMAMATSU PHOTONICS K.K., Solid State Division

1126-1 Ichino-cho, Higashi-ku, Hamamatsu City, 435-8558 Japan, Telephone: (81) 53-434-3311, Fax: (81) 53-434-5184

U.S.A.: Hamamatsu Corporation: 360 Foothill Road, Bridgewater, N.J. 08807, U.S.A., Telephone: (1) 908-231-0960, Fax: (1) 908-231-1218

Germany: Hamamatsu Photonics Deutschland GmbH: Arzbergerstr. 10, D-82211 Herrsching am Ammersee, Germany, Telephone: (49) 8152-375-0, Fax: (49) 8152-265-8

France: Hamamatsu Photonics France S.A.R.L.: 19, Rue du Saule Trapu, Parc du Moulin de Massy, 91882 Massy Cedex, France, Telephone: 33-(1) 69 53 71 00, Fax: 33-(1) 69 53 71 10

United Kingdom: Hamamatsu Photonics UK Limited: 2 Howard Court, 10 Tewin Road, Welwyn Garden City, Hertfordshire AL7 1BW, United Kingdom, Telephone: (44) 1707-294888, Fax: (44) 1707-325777

North Europe: Hamamatsu Photonics Norden AB: Torshamnsgatan 35 16440 Kista, Sweden, Telephone: (46) 8-509-031-00, Fax: (46) 8-509-031-01

Italy: Hamamatsu Photonics Italia S.r.l.: Strada della Moia, 1 int. 6, 20020 Arese (Milano), Italy, Telephone: (39) 02-93581733, Fax: (39) 02-93581741

China: Hamamatsu Photonics (China) Co., Ltd.: B1201, Jiaming Center, No.27 Dongsanhuan Beilu, Chaoyang District, Beijing 100020, China, Telephone: (86) 10-6586-6006, Fax: (86) 10-6586-2866